

MANUAL AIR-INJECTOR WAX MACHINE



1. Air intake
2. Pressure regulating valve
3. Pressure gauge
4. Over pressure valve
5. Wax injector nozzle
6. Temperature control panel
7. Hand pump

Instructions For Use:

1. Connection method: Insert the air pump (7) into the air inlet (1), then rotate the pressure regulating valve (2) backward and then pump the air to the required pressure.
2. Temperature setting method: First press the set button on the temperature control panel (6), then use the up and down buttons to set the desired temperature.
3. Align the rubber mould parallel to the wax injection port (5) and push inwards.

Product details:

Voltage: AC220V

Power: 350W

Dimensions: 26x26x42cm

Weight: 8.5Kg

HS WALSH & SONS

— SERVING JEWELLERS & HOROLOGISTS SINCE 1947 —

London
020 7242 3711

Biggin Hill
01959 543660

Birmingham
0121 236 9346

mail@hswalsh.com www.hswalsh.com