



STEAM CLEANER

MODEL, "EITAN" LSE-3/C

Directons for operation and use

*www.eitanindustries.com
info@boybvba.com*

PARTS REFERENCE



ITEM	NUMBER	ITEM	NUMBER
Foot pedal	1	Upper water level tap	9A
On/Off Switch	2	Lower water level tap	9B
On/Off - Pedal	3	water level glass	10
Pressure control indication light	4		
Pressure Gauge	5		
Safety Valve	6		
Solenoid Valve & Button Steam regulator	7		
Water filling tap	8A		
Water discharge tap	8B		

Operation

Filling the unit with water

- Connect unit to power supply.
- Set the unit **on Pedal** by pressing the **RED switch**.

3



ALERT

**DO NOT PRESS
GREEN SWITCH!
MUST STAY OFF**

- Pressure gauge to be on 0 bar.
- Open the water filling tap.
- Attach the funnel on it.

5

8 A



- **Make sure the water level taps are standing the correct/horizontal position as shown.**




9 **A**
9 **B**

- **Now press the foot pedal and simultaneously pour the water in the funnel.**




- **Fill the water level so that it is in the range of minimum and maximum. Sing markings for minimum and maximum levels are indicated on the water level glass cover.**

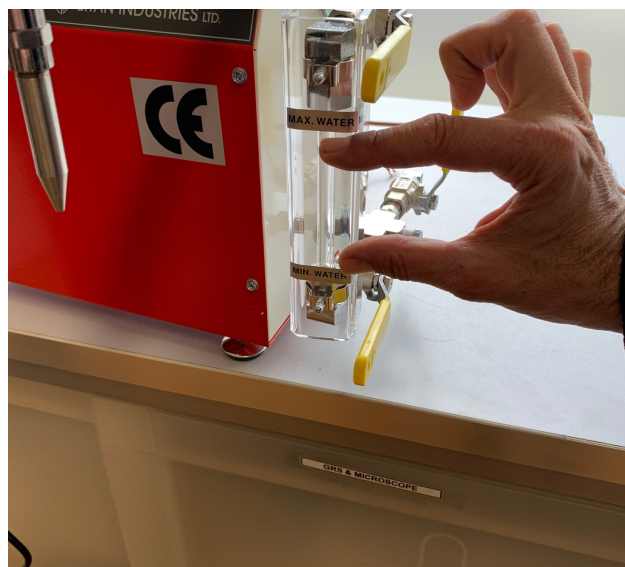

10

- When finished filling the the unit with water, remove the funnel and close the tap.

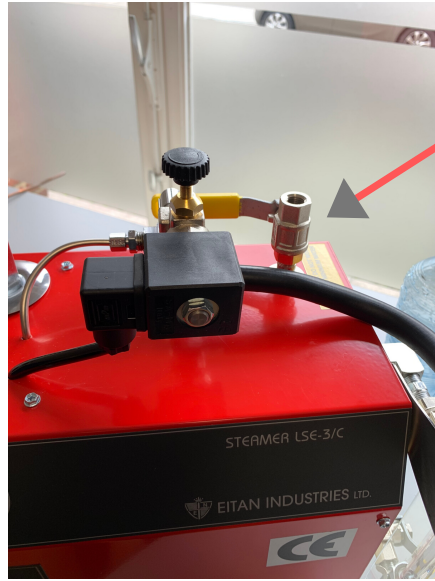

SAFETY REMARKS

*Safety valve is operating in case of over pressure.
Once a year please check for correct functioning.*

Maintenance routine:

Distilled water recommended.

Draining to be done every 2 month.

Normal tap water depends on the quality as the lime can cause built up in the machine.

With normal tap water the machine has to be drained every week.

Draining is better while the machine is still warm after use and some pressure still shown on the gauge.

Alert! Unit must be disconnected from power supply.

Start the steamer and operation

- Push the green switch to start operation.



- You will notice the red lamp light up on the unit.
- The lamp will turn off when pressure reached bar 7-8.




- Push the foot pedal to release steam.
- After cleaning dont forget to turn off the foot pedal.




- To adjust the strength of the steam please use the regulator located on top of the solenoid valve.



- For maximum result hold the object approximately 2cm distance from the steam nozzle.

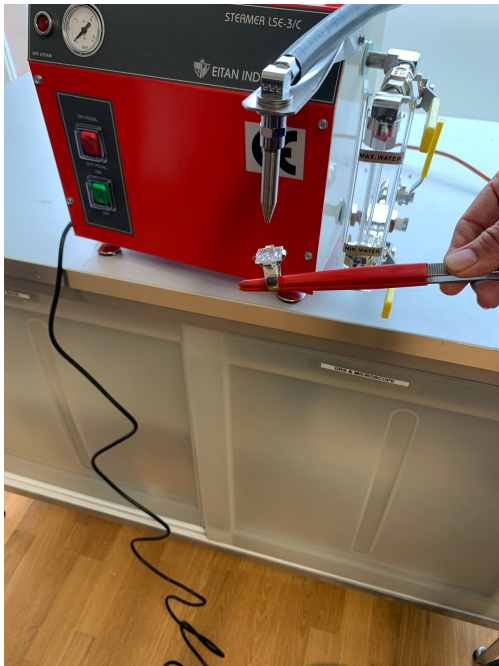

Correct distance

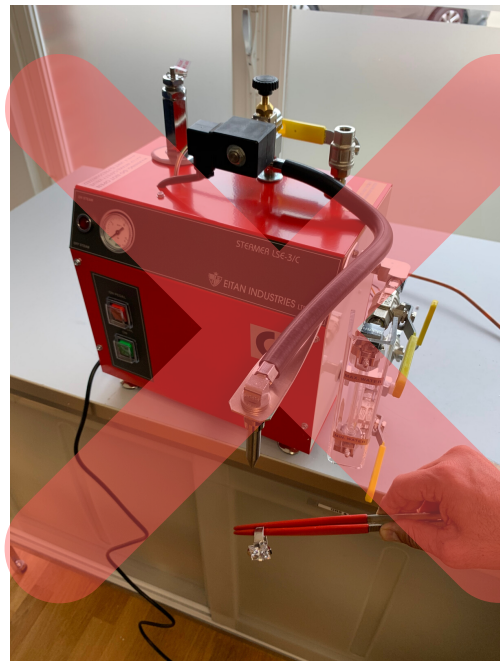

Wrong distance

Draining

- Recommended to drain the machine every weekend while it is still hot and still has some pressure built up.
- First switch the machine off.

2




- Connect the copper pipe.
- The handle in upward/ vertical position *at this point.*

8 B



- Place a bucket under the pip.
- Open the tap by moving it into vertical position.
- Due to pressure the water will flow out quite hard when machine empty close

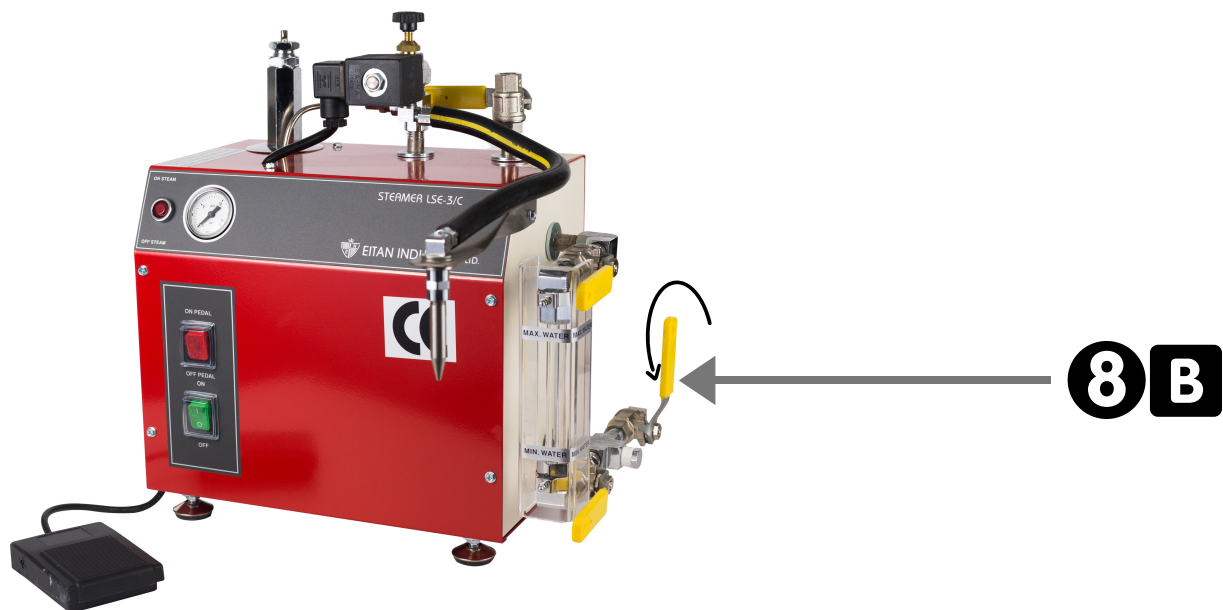

SAFETY REMARKS

*In case there is a leak detected or a crack on the water level glass.
To troubleshoot: please move the water level taps in vertical position.
This will neutralize the leak.*

10

9

A B

For assistance and support please contact our technical support team.

Always quote your serial number.

+3214817052

www.eitanindustries.com

info@boybvba.com