


QR CODE





ONLINE SHO

24HR SERVICE QR CODE

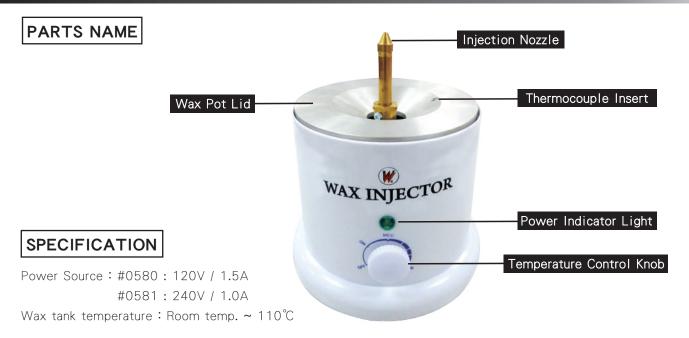

## Instruction:

- 1 Plug in the power cord and remove the pot lid. Pour wax beads into the tank to 80% full, then put the lid back.
- 2 Turn the temperature control knob clockwise to the fifth grid as illustrated.
- 3 Wait about 60 mins for wax to melt.
- 4 Aim the rubber mold hole vertically at wax injection nozzle and push downward to inject wax.







## Safety & Maintenance:

- ★ Be sure to turn off the machine and unplug the power cord after use.
- ★ The melting temperature might be different upon surrounding room temperature.

  For first time use, use a thermocouple to detect temperature and make adjustment accordingly.