


INSTRUCTIONS FOR USE - MODE D'EMPLOI - INSTRUCCIONES DE USO - ISTRUZIONI PER L'USO



N° 167.771

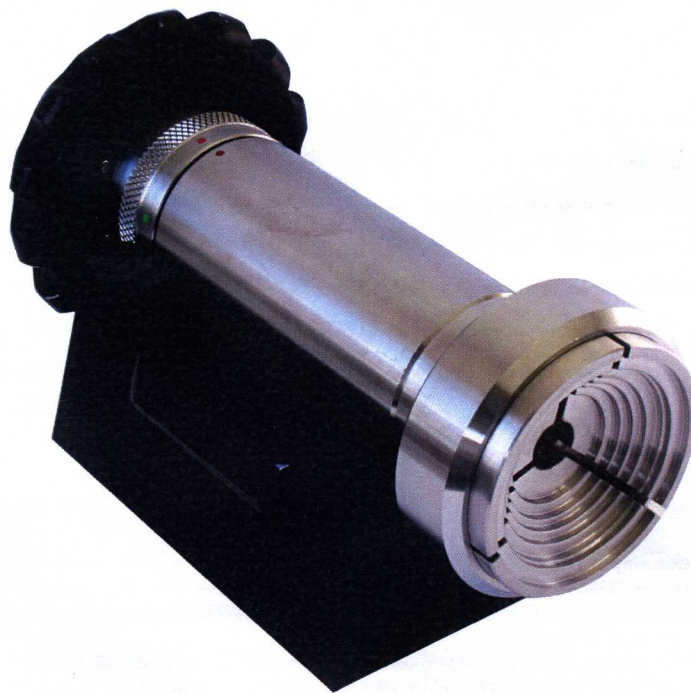

A*F Bezel resizing tool

A*F Outil d'ajustement des lunettes de montre

A*F Herramienta de reducción de los biseles de reloj

A*F Strumento per la regolazione della lunetta di orologio



AF Switzerland SA

Rue de la Promenade 2 - CH-2302 La Chaux-de-Fonds - Switzerland
T +41 32 910 03 70 - F +41 32 910 03 71 - reception@afswitzerland.com - www.afswitzerland.com



INSTRUCTIONS FOR USE

A*F Bezel resizing tool - N° 167.771

This tool is designed to adjust the diameter of watch bezels and glass | crystal retaining rings. It is based on an existing Rolex tool N° 1006 but has a wider range of adjustment sizes and can be used on other brands of watch.

First of all, before assembling the tool, identify the various parts as shown below :

- 1 Handle
- 2 Body
- 3 End-piece to hold reduction chucks
- 4 Reduction chuck, max. capacity \varnothing 42 mm
- 5 Reduction chuck, max. capacity \varnothing 44 mm
- 6 Reduction chuck, max. capacity \varnothing 46 mm
- 7 End-piece to hold enlarging chucks
- 8 Enlarging chuck, max. capacity \varnothing 43 mm
- 9 Enlarging chuck, max. capacity \varnothing 45 mm
- 10 Stand for assembled tool

Assembling the tool

The easiest way to assemble is to place the handle (1) upside down on a flat surface and then to place the body (2) over the shaft of the handle with the threaded end of the body at the top. Depending on whether the job is to enlarge or reduce, screw the corresponding end-piece [(3) or (7)] on the top of the body.

Choose the appropriate chuck [(4)-(5)-(6) or (8)-(9)] according to the size of the bezel to resize, insert and screw in to the tool by holding the handle with one hand and turning the assembled tool in a clockwise direction. Line up the red dot markers on the base of the handle and the body of the tool.

Place the watch ring or bezel into the chuck on the stepped sides according to the size.

Turn the handle clockwise to adjust the size. To judge the degree of resizing, use the green dots and the red marker dot on the body of the tool.

When not in use, the tool can be conveniently placed on the stand (10).

DISCLAIMER : *We are in no way affiliated with the aforementioned company (Rolex).*



AF Switzerland SA

Rue de la Promenade 2 - CH-2302 La Chaux-de-Fonds - Switzerland
T +41 32 910 03 70 - F +41 32 910 03 71 - reception@afswitzerland.com - www.afswitzerland.com

